



# Disassembling Samsung SPH-A760 Screen

Give a short summary.

Written By: doconnor



## INTRODUCTION

How to remove the screen.

---

### TOOLS:

- [Magnetic Project Mat](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
  - [Spudger](#) (1)
-



## Step 1 — Battery



- Push open the latch and remove the battery.

## Step 2 — Antenna



- Twist off the antenna.
- Pop off the transparent cylinder.

## Step 3 — Logic Board



- Remove the five screws as shown.


## Step 4



- Carefully pry the back plate off.




## Step 5

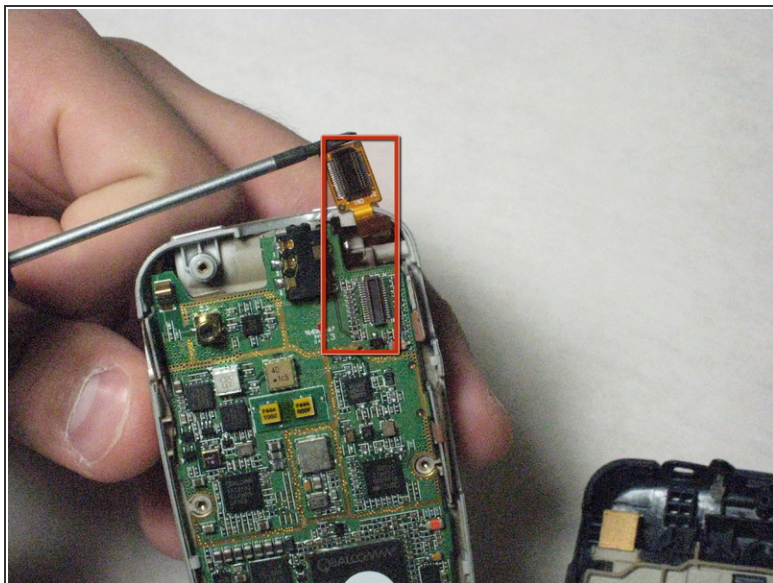

- Carefully detach golden screen connector.

## Step 6


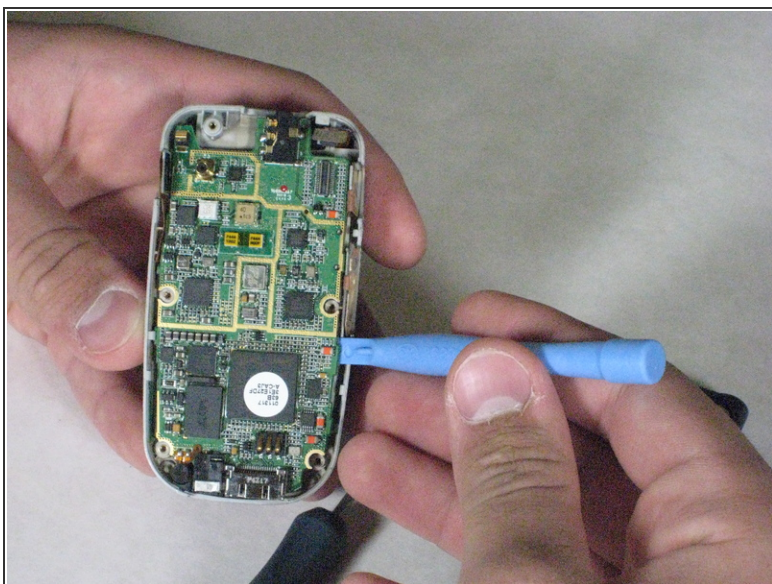


- Pop out the logic board with spudger.

⚠ Caution: Do not touch with bare hands, use tweezers or wash hands before contact.



## Step 7

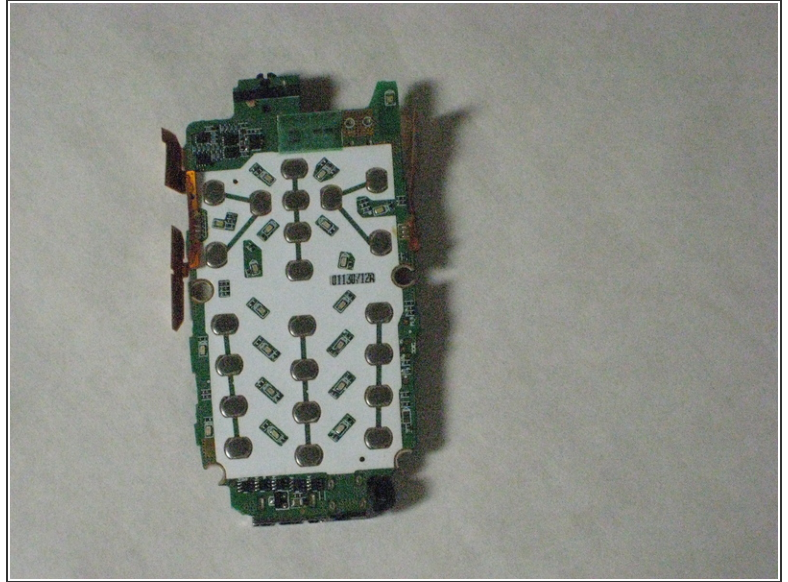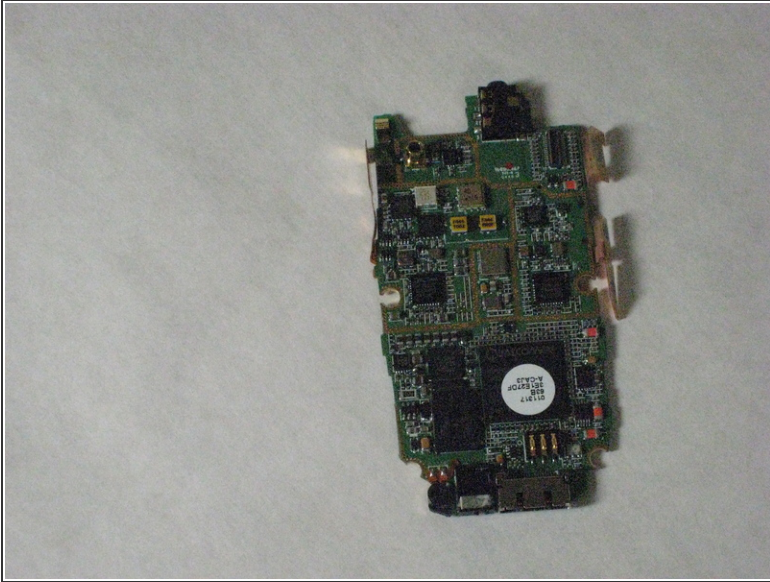

- Place the logic board on a clean tray.

## Step 8 — Big Speakers



- Remove the hinge on the phone.
  - Put pressure on the spring with the screwdriver to unhinge phone.
- Make sure to pull the gold wire through, don't let it rip.



## Step 9



- Remove the four screws as shown
- Use the spudger to pry it open, excessive force may be necessary.


## Step 10



- Remove the three screws that hold the big speaker
- ⚠ Caution: The wires are attached to the screen and should be removed with care.





## Step 11 — Screen

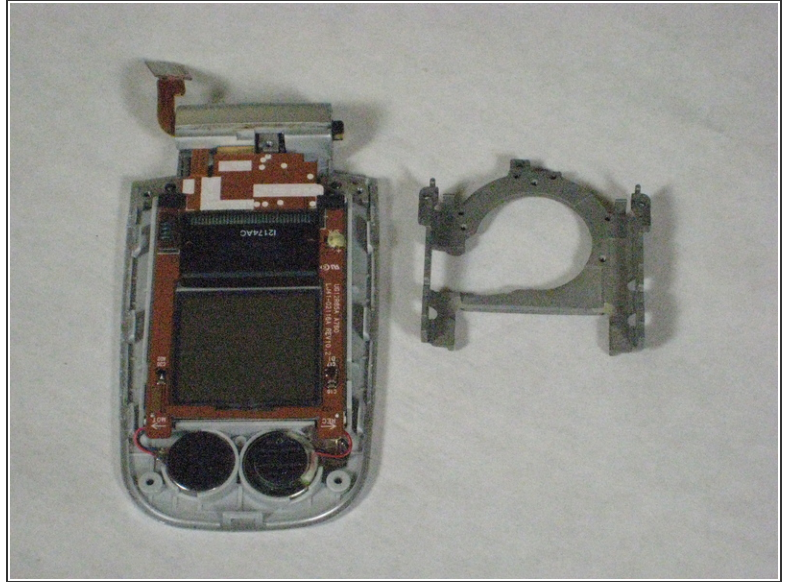

- Remove the three screws as shown.
- Pull off the metal bracket.

## Step 12

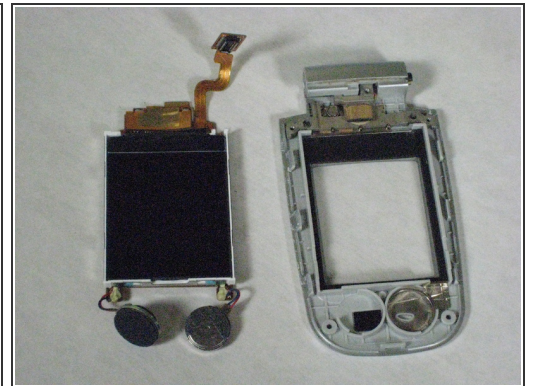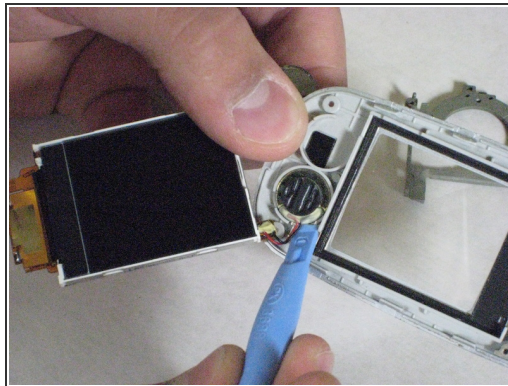

- Use the spudger to pop off the screen.
  - Pop off the Microphone/Speaker as well.
- Place all of the components on a clean tray and clean environment.

To reassemble your device, follow these instructions in reverse order.



